



## RESIDENTIAL GAS REPLACEMENT PARTS LIST

### RTG-S Tankless Models

**Models Covered:**  
RTG-S-199N1  
RTG-S-199X1



**Effective: February 2025**  
**ECO 8873**


**NOTE: BOTH MODEL AND SERIAL  
NUMBERS ARE REQUIRED FOR  
ORDERING REPLACEMENT PARTS**

Dimensions and specifications  
subject to change without notice.



As required by the state of California Proposition 65.





# Infiniti® GS Tankless Water Heater

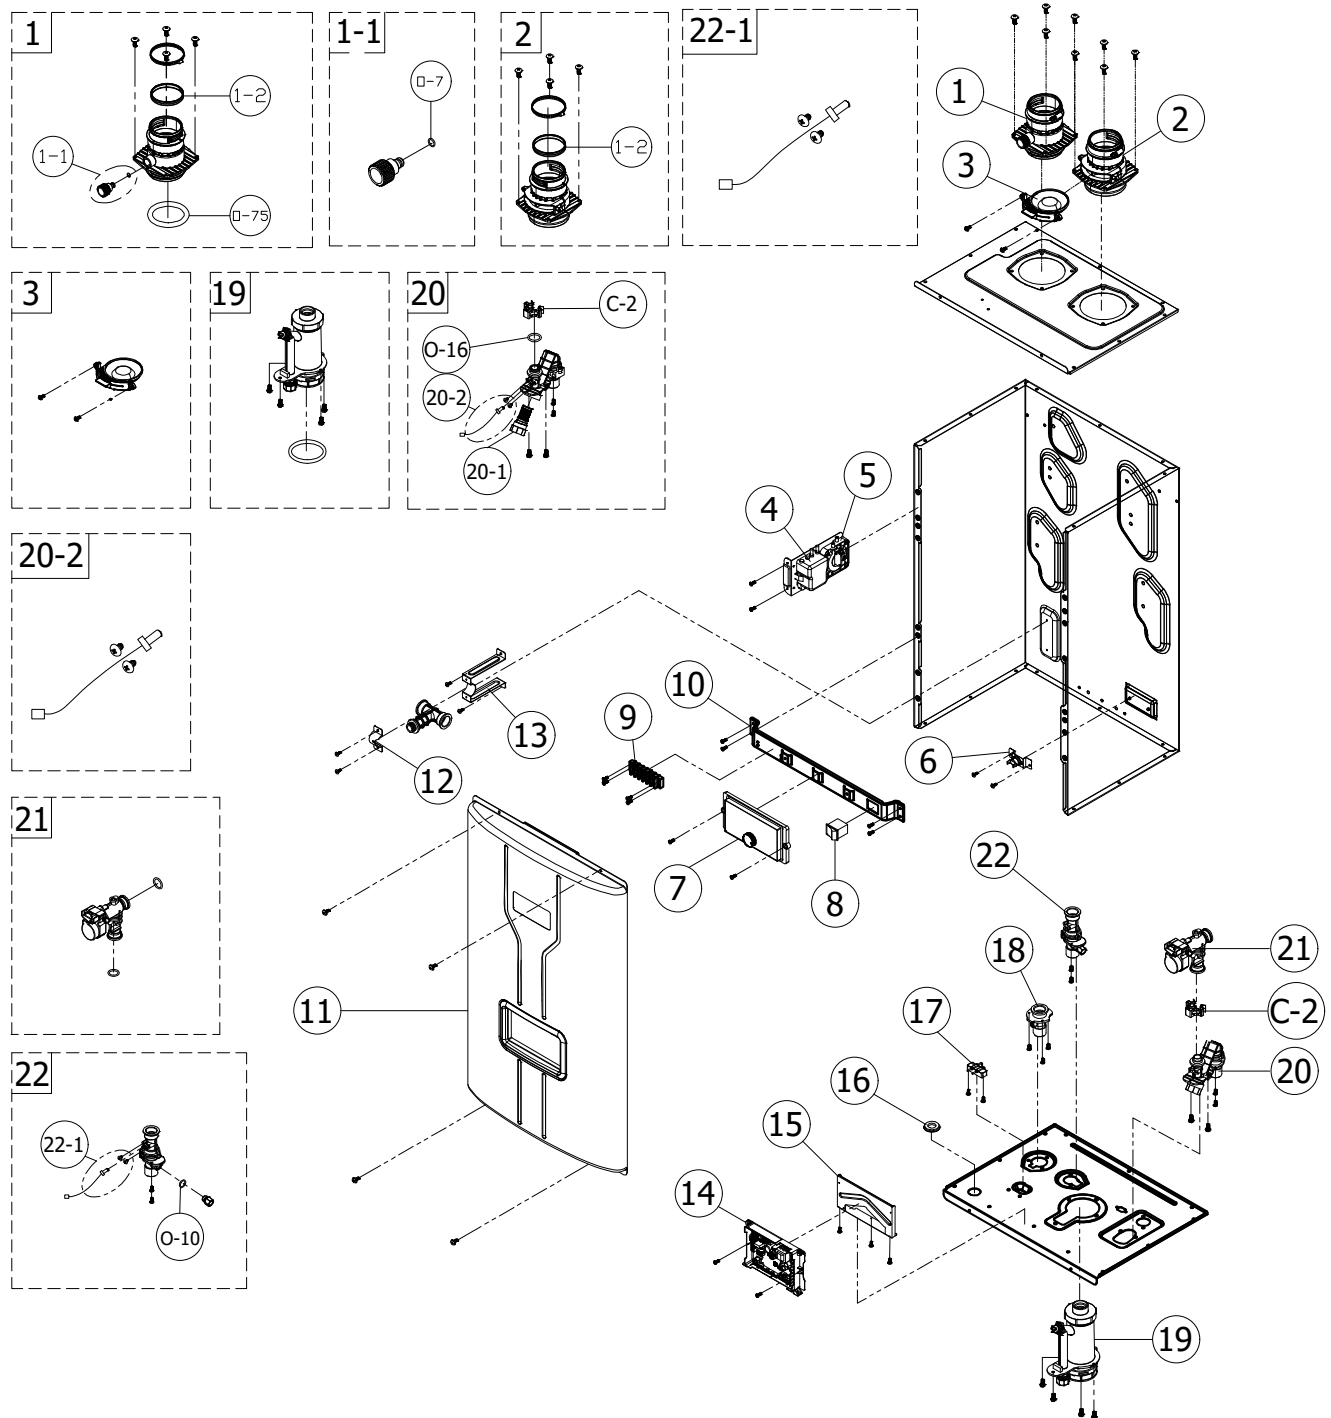

**Infiniti® GS Tankless Water Heater**

<b>IOM Ref</b>	<b>Part Number</b>	<b>Description</b>
1	ST1224	Exhaust Vent Duct ASSY'
1-1	ST1225	Exhaust Vent Cap Assy
1-2	ST1190	Exhaust and Intake Packing
O-75	ST1244	O ring P75 10 pcs
O-7	ST1242	O ring P7 10 pcs
2	ST1226	Intake Inlet Duct ASSY'
3	ST1227	Air Intake filter Assy
4	ST1006	Ignition Transformer
5	ST1144	Air Pressure Switch
6	ST1008	Overheat Switch 15°C (with Bracket)
7	ST1140	Control display of RTGS & LT Standard (PR-922C)
8	ST1019	Main Power Switch
9	ST1143	On-Demand Terminal Block
10	ST1093	Bracket for control display
11	ST1099	Front Cover ASSY'
12	ST1168	PPS Bracket_1
13	ST1169	PPS Bracket_2
14	ST1139	Printed Circuit Board
15	ST1163	PCB Bracket
16	ST1189	Wiring Through Way Packing
17	ST1146	Water Leak Detector
18	ST1007	Gas Inlet Nipple
19	ST1101	Siphon ASSY'
20	ST1104	Water Inlet Pipe ASSY'
20-1	ST1024	Water Inlet Filter
20-2	ST1229	Cold Water Temperature Sensor Assy
21	ST1105	Flow Control Valve ASSY'
22	ST1100	DHW Supply Pipe ASSY'
22-1	ST1228	DHW Temperature Sensor Assy
O-10	ST1192	O-ring(P10A)
C-2	ST1054	Star CLIP (Small)
O-16	ST1194	O-ring(P16)

# Infiniti® GS Tankless Water Heater

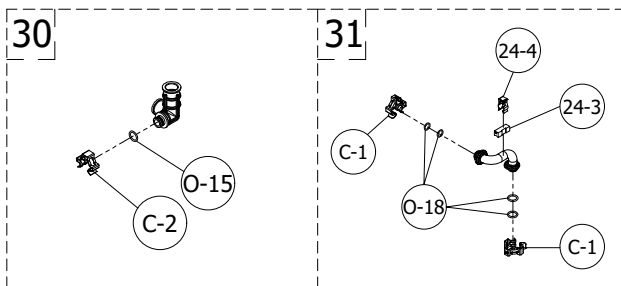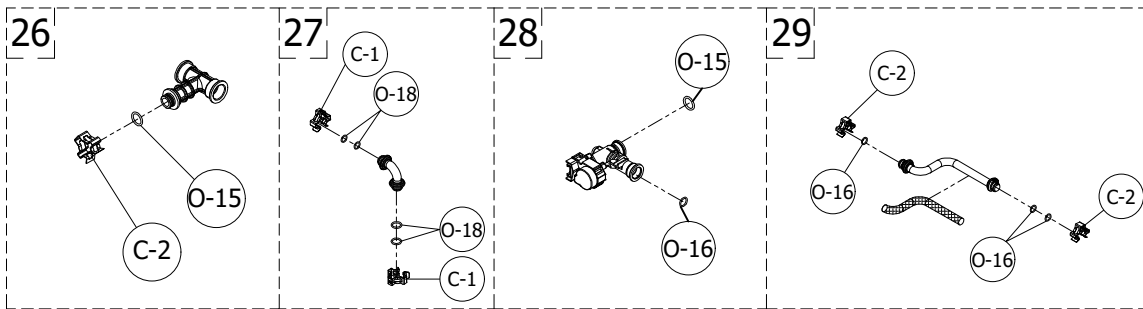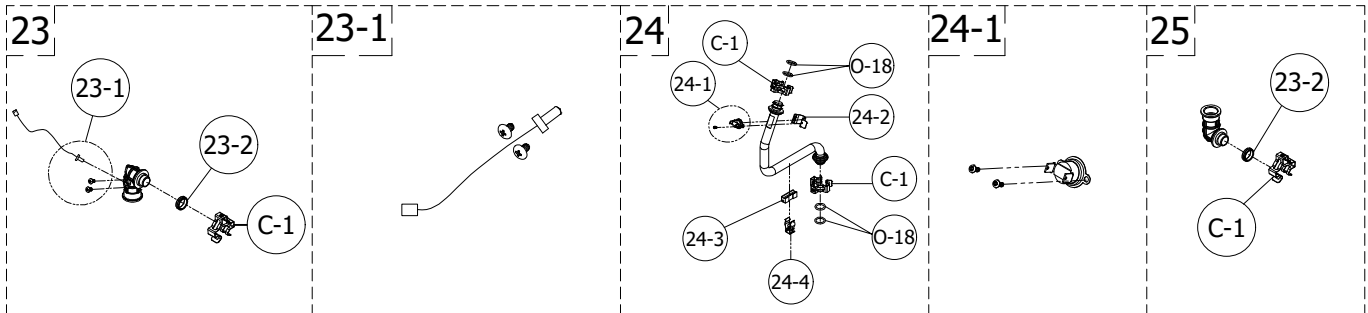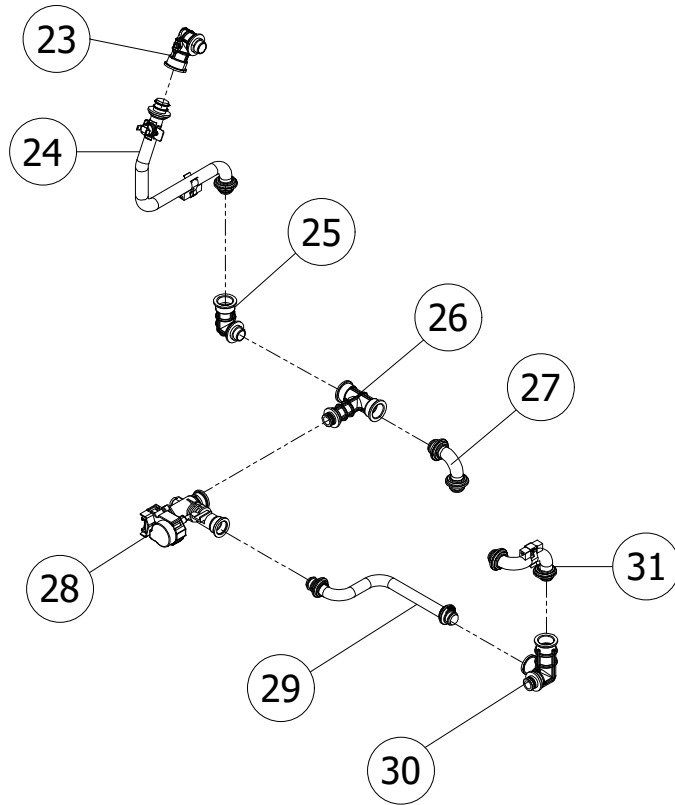


**Infiniti® GS Tankless Water Heater**

---

<b>IOM Ref</b>	<b>Part Number</b>	<b>Description</b>
23	ST1106	Hot water Outlet Block ASSY'
23-1	ST1230	Hot Water Temperature Sensor Assy
23-2	ST1218	Block Packing
24	ST1125	Hot Water Outlet Pipe 1 ASSY'(Standard)
24-1	ST1231	Overheat Switch 95°C Assy
24-2	ST1167	Overheat Switch Bracket
24-3	ST1056	Ceramic Heater
24-4	ST1164	Ceramic Heater Bracket
25	ST1126	Hot water Outlet Block(_blockage) ASSY'
26	ST1127	T-Block ASSY'
27	ST1128	Hot Water Outlet Pipe 2 ASSY'(Standard)
28	ST1232	Water Mixing Valve Assy
29	ST1129	Mixing Pipe ASSY'(Standard)
30	ST1130	Cold Water Inlet Block ASSY'(Standard)
31	ST1131	Cold Water Inlet Pipe ASSY'(Standard)
C-1	ST1166	Star CLIP (Large)
C-2	ST1054	Star CLIP (Small)
O-15	ST1193	O-ring(P15)
O-16	ST1194	O-ring(P16)
O-18	ST1195	O-ring(P18)

# Infiniti® GS Tankless Water Heater

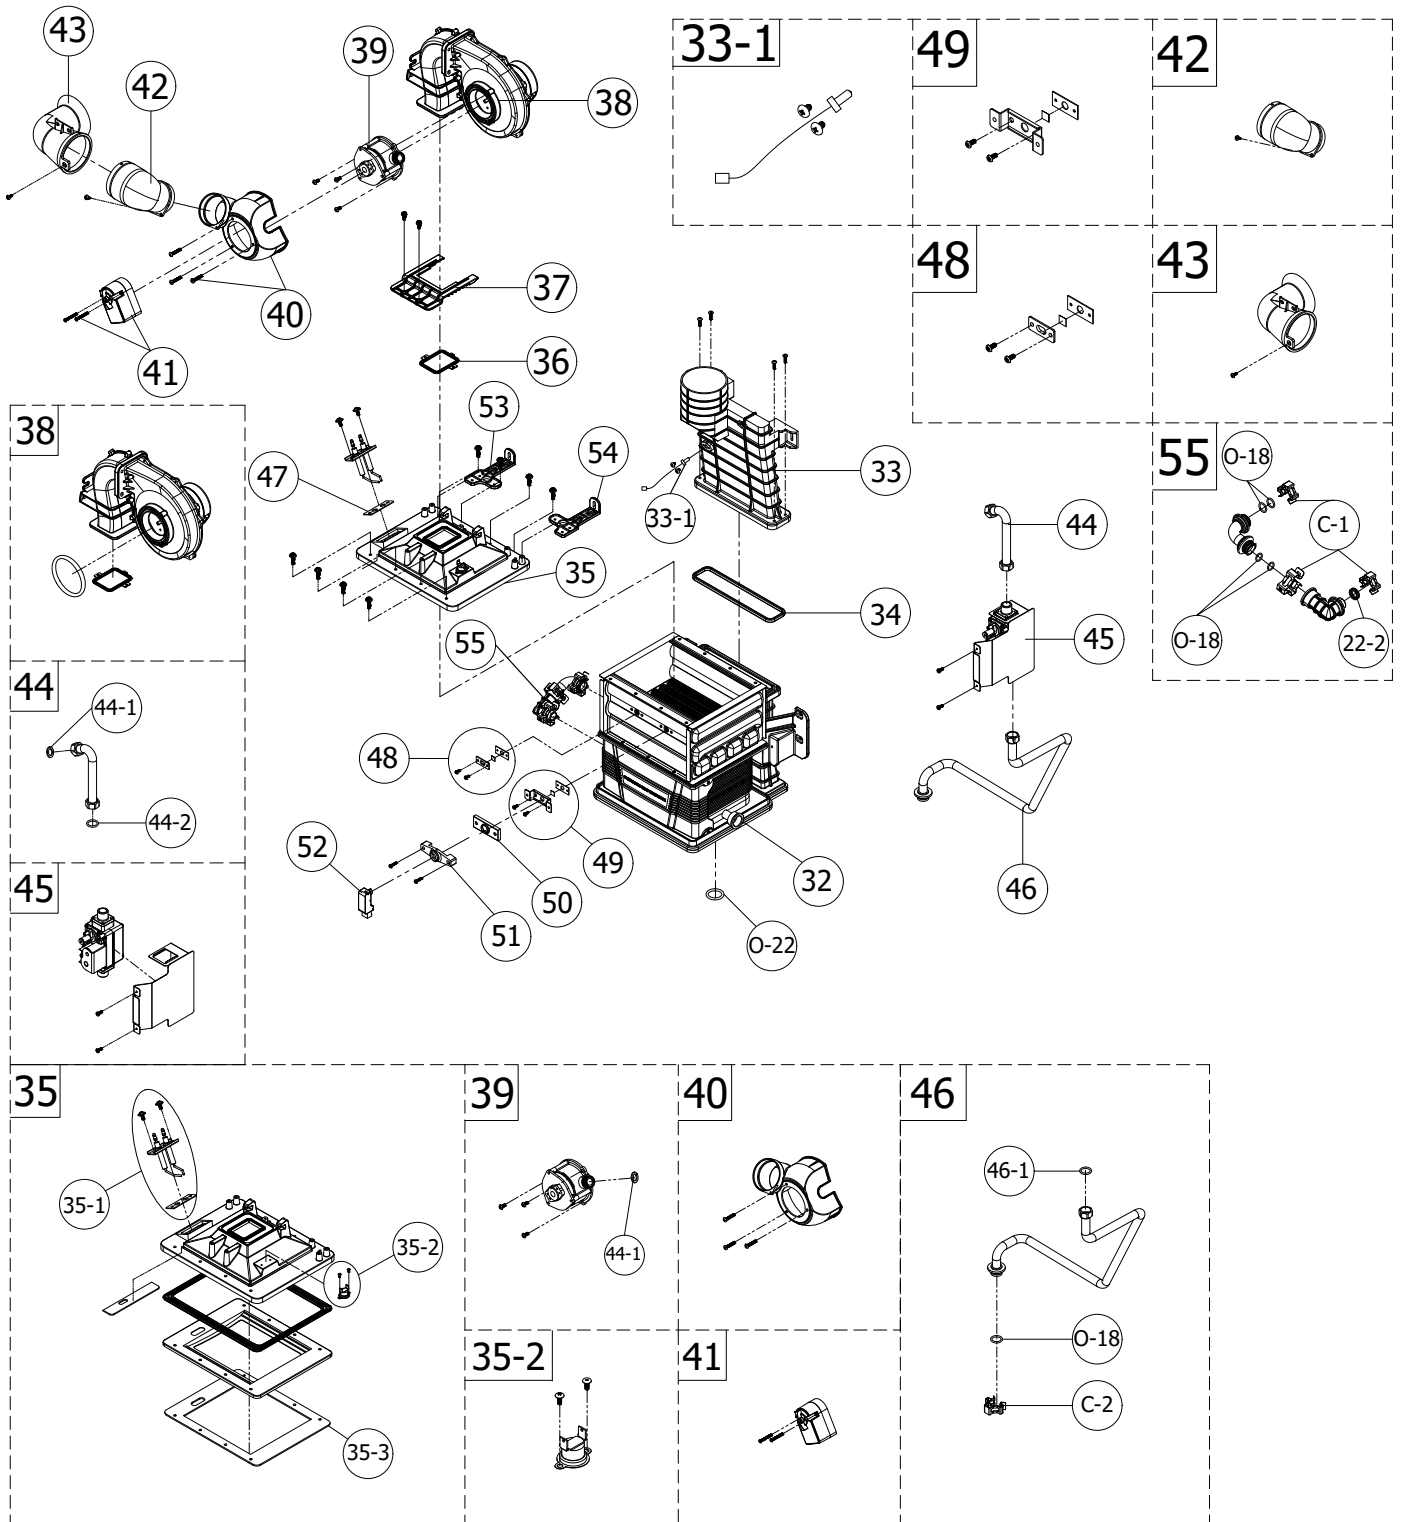

## **Infiniti® GS Tankless Water Heater**

<b>IOM Ref</b>	<b>Part Number</b>	<b>Description</b>
32	ST1202	Heat Exchanger ASSY'(Standard)
33	ST1134	Exhaust Pipe Upper
33-1	ST1031	Exhaust Temperature Sensor
34	ST1248	Exhaust Packing 5 pcs
35	ST1119	Burner ASSY'
35-1	ST1204	Ignition Rod ASS'Y
35-2	ST1234	Burner High Limit Switch ASSY'
35-3	ST1199	Burner Gasket
36	ST1191	Burner Head Packing
37	ST1136	Burner Head Bracket
38	ST1120	Blower ASSY'
39	ST1147	MIXER ASSY' KIT_NG
39	ST1148	MIXER ASSY' KIT_LP
40	ST1205	AGM (Cover) ASSY'
41	ST1255	AGM (Actuator)
42	ST1235	Silencer Elbow ASSY'
43	ST1236	Silencer Body ASSY'
44	ST1121	Gas Pipe (upper) ASSY'
44-1	ST1188	Gas Mixer Packing
44-2	ST1247	15A Packing(Green) 10 pcs
45	ST1122	Gas Valve ASSY'
46	ST1132	Gas Pipe (lower) ASSY'(Standard)
46-1	FT1645	15A Packing
47	ST1198	Ignition Rod Gasket
48	ST1095	Flame Observation ASSY'
49	ST1096	Flame Detector Sensor ASSY'
50	ST1165	Flame Detector Sensor Cover
51	ST1187	Flame Detector Sensor Bracket
52	FT1327	Flame Detector Sensor
53	ST1137	Burner Bracket (Left)
54	ST1138	Burner Bracket (Right)
55	ST1254	HEX Connection Pipe ASSY'
C-2	ST1054	Star CLIP (Small)
O-18	ST1195	O-RING(P18)
O-22	ST1245	O ring P22 10 pcs



## United States

---

**Sales** 1-800-523-2931  
**Technical Support** 1-800-334-3393  
**Email** [techsupport@bradfordwhite.com](mailto:techsupport@bradfordwhite.com)  
**Warranty** 1-800-531-2111  
**Email** [warranty@bradfordwhite.com](mailto:warranty@bradfordwhite.com)  
**Service Parts** 1-800-538-2020  
**Email** [parts@bradfordwhite.com](mailto:parts@bradfordwhite.com)

## Canada

---

**Sales** 1-866-690-0961 1-905-203-0600  
**Fax** 905-636-0666  
**Warranty** 1-800-531-2111  
**Email** [warranty@bradfordwhite.com](mailto:warranty@bradfordwhite.com)  
**Technical Support** 1-800-334-3393  
**Email** [techsupport@bradfordwhite.com](mailto:techsupport@bradfordwhite.com)  
**Service Parts and Orders** [ca.orders@bradfordwhite.com](mailto:ca.orders@bradfordwhite.com)

For U.S. and Canada field service, contact your professional installer or local Bradford White sales representative.

## International

---

**General Contact** [international@bradfordwhite.com](mailto:international@bradfordwhite.com)